NFZ Complete 100% Removal for Typhoon H

- 1. Open Typhoon H GUI and with the H powered off connect it via the USB cable to your computer.
- 2. Click Tools at the top of the GUI and then click Firmware Update to open the Firmware Update window.
- 3. Locate the TyphoonH-FC_V1.26_12_8_2016_NFZ_DISABLE_BY_REGISTER.yuneec saved on you PC and select it so it appears in the file window.

le Edit Tools Sensor Mormation V Settings © GPS Information	Sensor and Motor Speed Crientation Sensor (IMU) Pressure Sensor Compass	Controller Status —	3	Speed Controllers(ESC)	C		Speed Controller Status	and lesting
Sensor Information Settings GPS Information	Sensor and Motor Speed Orientation Sensor(IMU) Pressure Sensor Compass	Controller Status —	3	Speed Controllers(ESC) Sonar	0		Speed Controller Status	and lesting —
 Settings GPS Information 	Orientation Sensor (IMU) Pressure Sensor Compass	8	3	Speed Controllers(ESC) Soner	0		Enable Testing	CXX
 Settings GPS Information 	Pressure Sensor Compass	0	13	Sonar				VO ON
GPS Information	Compass	6			(C)			ATA
	GPS							PTX (19
		100					ALL TURN	RA
Device Information								\sim
	Battery		-					
	Voltage (V) 0.00	0%	<u> </u>					
	Accelerometer(mG)	— 🔝 Firmv	vare Update			- ×		
	X 0.000					_	Magnitude 0.000	
	fautoscopol" (s)	File: ZA	Personal Folders\M	dike Vasquez'(Firmwa	are Updates\D			
	x 0.00	Port:						
	[M1					
	Orientation(")	0	M8				ISSN PROFESSION	
	Rol	(a) More			Unde		Yew 0.00	1
		O mare			- Comment		()	
	23	Sand S		the second	and and		- 人士入	1
		X		1	5			
		/•\		_0	<u> </u>		X + Y	
							· '	
	Compass (raw value)							
	x 0.00		γ D	00		Z 0.00		
	Pressure sensor	<u>-</u>	100		1	1000		
	Pressure (Pa) 0.00	-	Temps	srature(ht) [0.00	-	Height Es	timate (m) 0.00	

4. Select the correct COM Port then click Update. The progress bar should move across and you should get an Update Successful message when done then click finished and your Typhoon H should automatically power on.

it Tools	Encor and Motor Encod Controller	Status		Frend Costroller Styles and Tection
ser Information	Sensor and Motor Speed Controller	status		speed controller status and resting -
10.	Orientation Senuor(IVU)	Speed Control	and(CSL)	tructer lesting
lings	Pressure Sensor	Sonar	0	the states
Information	Compass 🛞			The second secon
	gps (P)			ALL TURN
ice Information				
	Battery	_		
	Voltage (V) 0.00 0	×P		
	Accelerometer(m6)	Firmware Update	_ ×	
	000.0 ×			Magnitude 0.000
	Gyroscope(?/s)	 Z:\Personal Folders\Mike Vasquez 	\/Firmware Updates\D	
	x 0.00 Por	t: COM8	-	
	OdestationII			
	Pull C			X 0.00
		More	Update	
	1 1		< 4 .r	
		3		
	/ĭ∖			
				`′
	L			1956 Doubles
	Compass (raw value)			
	× 000 ×	Y 0.00	7	0.00
	Pressure Sensor			
	Every an (Bal 2010)	Temperature PT3	100 L	alobe Estimate (w) (100

phoon H					
Tools					
Information	Sensor and Motor Speed	Controller Status	-		Speed Controller Status and Testing
	Orientation Sensor(IMU)	100	Speed Controllers(ESC)		Enable Testing
8	Pressure Sensor	(3)	Sumar		II ADA
formation	Compass	0			11 97 9 7
	GPS	8			ALL TURN
Information					
	Battery				
	Voltage (V) 0.00	0%			
	Accelerometer(mG)	— 🙆 Firmware	Update	- ×	
	X 0.000			-	Magnitude 0.000
	Gyroscope(%)	File: Ziyrerso	nai Folders (Mike Vasquez (Firmiware Opdates		
	X 0.00	Port: COM8		*	
	Orientation(*)				
	Bull				Vev 0.00
	975	More		Update	Liter Pool Agencia and
		12			
	1 10	No. of Contraction	and the second		ATA
			R.		
	/				X-1-7
					` ~ ~'
	Compass (raw value)		201	2007 (
	X 0.00		Y 0.00	Z 0.00	
	Pressure Sensor				
			The second se		A state of lange in the second state of the se
	Pressure (Pa) 0.00		Temperature("C) 0.00	Height Es	stimate (m) 000
phoon H	Pressure (Pa) 0.00		Temperature("C) 0.00	Height Er	stomate (m) 0000
phoon H Tools	Sensor and Motor Speed	Controller Status	Temperature("C) 0.00	Height Er	Speed Controller Status and Testing
phoon H Tools Information	Sensor and Motor Speed Unentation Sensor(MU)	Controller Status	Temperature("C) 0.00	Height Er	Speed Controller Status and Testing -
phoon H Tools Information	Pressure (Pb) 0.00 Sensor and Motor Speed Orientation Sensor()MU Pressure Sensor	Controller Status	Temperature("C) 0.00 Speed Controllers(ESC) 0 Sonar 0	Height Er	Speed Controller Status and Testing -
phoon H Task Information	Sensor and Motor Speed Onertation Sensor(MU) Pressure Sensor Compass	Controller Status	Temperature("C) 0.00 Speed Controllers(ESC) (C) Sonar (C)	Height Er	Speed Controller Status and Testing -
phoon H Tools Information	Pressure (Ph) 0.00 Pressure and Motor Speed Orientation Sensor Compass cass cass	Controller Status	Temperature("C) 0.00 Speed Controllers(ESC) 6 Sonar 6	Height Er	Speed Controller Status and Testing -
phoon H Task Information 32 Formation	Pressure (Pb) 0.00 Sensor and Motor Speed Onentation Sensor(MU) Pressure Sensor Compass GPS	Controller Status	Temperature("C) 0.00 Speed Controllers(ESC) @ Sonar @	Height Er	Speed Controller Status and Testing –
phoon H Taale Information formation	Sensor and Motor Speed Orientation Sensor(MU) Pressure Sensor Compass GPS Battery	Controller Status	Temperature("C) 0.00 Speed Controllers(ESC) 6 Sonar 6	Height Er	Speed Controller Status and Testing -
phoon H Taak Information ga Iformation	Sensor and Motor Speed Onentation Sensor(MU) Pressure Sensor Compass GPS Battery Voltage (V) CCCU	Controller Status	Temperature("C) 0.00 Speed Controllers(ESC) (6) Sonar (6)	Height Er	Speed Controller Status and Testing -
phoon H Taak Information 22 Formation	Sensor (Ph) 0.00 Sensor and Motor Speed Onentation Sensor(MU) Pressure Sensor Compass GPS Battery Voltage (V) 0.00 CAtcelorometer (m6)	Controller Status	Temperature("C) 0.00	- ×	Speed Controller Status and Testing -
phoon H Taak Information g: Jarmation	Sensor and Motor Speed Onentation Sensor(MU) Pressure Sensor Compass GPS Battery Voltage (V) 0.00 Accelerometer (m6) X 0.000	Controller Status	Temperature("C) 0.00	Height Et	Speed Controller Status and Testing - Enable Testing ALL TURN Megnitude 0.000
Phoon H Tools Information gs Information	Pressure (Ph) 0.00 Sensor and Motor Speed Onentation Sensor Compass GPS Battery Voltage (V) 0.00 Accelerometer (m6) Compass Comp	Controller Status	Temperature("C) 0.00	- ×	Speed Controller Status and Testing Enable Testing ALL TURN
phoon H Table Information gs Information	Pressure (Ph) 0.00 Sensor and Motor Speed Orientation Sensor Compani GPS Battery Voltage (V) 0.00 Accelerometer (m6) X 00000 Gynocope('/s)	Controller Status	Temperature("C) 0.00 Speed Controllers(ESC) 6 Sona: 6 Undate Note	- ×	Speed Controller Status and Testing - Enable Testing ALL TURN
phoon H Table Information formation	Pressure (Ph) 0.00	Controller Status	Temperature("C) 0.00 Speed Controllers(ESC) @ Sonar @ a Undate Note		Speed Controller Status and Testing - Enable Testing ALL TURN Megnitude 0.000
Phoon H Table Information	Pressure (Pb) 0.00 Sensor and Motor Speed Onentation Sensor(MU) Pressure Sensor Compass GPS Battery Voltage (V) 0.00 Accelsrometer (m6) X X 0.00 Grestation(") Orientation(")	Controller Status	Temperature("C) 0.00 Speed Controllers(ESC) 6 Sonar 6 a Lindata Note		Speed Controller Status and Testing - Chable lesting ALL TURN Megnitude 0.000
phoon H Taak Information	Pressure (Pb) 0.00 Sensor and Motor Speed Onentation Sensor(MU) Pressure Sensor Compass GPS Battery Voltage (V) 0.00 Accelerometer (m6) X X 0.00 X 0.00 Orientation(*) Roli	Controller Status	Temperature("C) 0.00 Speed Controllers(ESC) 6 Sonar 6 Note Flash successfully!		Speed Controller Status and Testing - Enable Testing ALL TURN Megnitude 0.000
Phoon H Table Information (formation	Pressure (Ph) 0.00 Sensor and Motor Speed Onentation Sensor(M/U) Pressure Sensor Compass GPS Battery Voltage (V) 0.00 Accelerometer (m6) X 0.00 Gyroscope(*/s) X 0.0 Pressure Sensor Roll	Controller Status	Speed Controllers(ESC) () Sone: () Sone: () Flash successfully! () Yes	e\D v Update	Speed Controller Status and Testing Enable Testing ALL TURN Magnitude 0.000
Phoon H Tools Information gs Information	Pressure (Ph) 0.00 Sensor and Motor Speed Unentation Sensor Compass GPS Battery Voltage (V) 0.00 Accelerometer (m6) X 0.000 Gyroscope(*/s) X 0.00 Crientation(*) Roli	Controller Status	Speed Controllers(ESC)	- ×	Speed Controller Status and Testing Enable Testing ALLIURN Megnitude 0.000
phoon H Table Information formation	Pressure (Ph) 0.00 Sensor and Motor Speed Orientation Sensor(MU) Pressure Sensor Compass GPS Battery Voltage (V) 0.00 Accelerometer (m6) X 0.000 Gyroscope(*/s) X 0.00 Roll Roll	Controller Status	Speed Controllers(ESC) () Sonar () Sonar () Hindiata Note Flash successfully! Yes	Height Et	Spreed Controller Status and Testing - Enable Testing ALL TURN Megnitude 0.000
phoon H Table Information formation	Pressure (Pb) 0.00 Sensor and Motor Speed Onentation Sensor(MU) Pressure Sensor Compass GPS Battery Voltage (V) 0.00 Accelerometer (m6) X X 0.00 Grientation(*) Roll	Controller Status	Speed Controllers(25C) () Sonar () A Hodata Note Flash successfully! () Yes	- X	Spreed Controller Status and Testing - Chable lesting ALL TURN Megnitude 0.000 Yew 0.00
Phoon H Taak Information	Pressure (Pb) 0.00 Sensor and Motor Speed Onentation Sensor(MU) Pressure Sensor Compass GPS Battery Voltage (V) 0.00 Accelerometer (m6) X X 0.000 Grientation(") Roll	Controller Status	Speed Controllers(ESC) () Sonar () A Undata Note Flash successfully! () Yes	- ×	Speed Controller Status and Testing - Chable lesting ALL TURN Megnitude 0.000 Yew 0.00
phoon H Table Information formation	Pressure (Pb) 0.00 Sensor and Motor Speed Onentation Sensor(MU) Pressure Sensor Compass GPS Battery Voltage (V) 0.00 Accelerometer (m6) X X 0.00 Orientation(*) Roll	Controller Status	Speed Controllers(ESC) () Sonar () A Hodata Note Flash successfully! () Yes	- X s\D Update	Spreed Controller Status and Testing - Chable lesting ALL TURN Megnitude 0.000 Yew 0.00
Phoon H Taak Information ga Iformation	Pressure (Pb) 0.00 Sensor and Motor Speed Onentation Sensor(MU) Pressure Sensor Compass GPS Battery Voltage (V) 0.00 Accelerometer (m6) X X 0.000 Gyroscope(*7s) X X 0.00 Orientation(*) Roll Compass (raw volue) Image: Compass (raw volue)	Controller Status	Speed Controllers(ESC) () Sonar () a Undata Note Flash successfully! () Yes	e\D	Speed Controller Status and Testing Enable Testing ALL TURN Megnitude 0.000
Phoon H Table Information ge Information	Pressure (Ph) 0.00 Sensor and Motor Speed Orientation Sensor Compass GPS Battery Voltage (V) 0.00 Accelerometer (m6) X 0.00 Orientation(") Roll Compass (raw volue) X 0.00	Controller Status	Speed Controllers(ISC)	- × =\D Update 	Speed Controller Status and Testing Enable Testing ALL TURN Megnitude 0.000
Phoon H Tools Information gs Information	Pressure (Ph) 0.00 Sensor and Motor Speed Unentation Sensor Compass GPS Battery Voltage (V) 0.00 Accelerometer (m6) X 0.00 Orientation(') Roli Compass (raw value) X 0.00 Pressure Sensor Pressure Sensor	Controller Status	Speed Controllers(ESC)	e(D)	Spreed Controller Status and Testing Enable Testing ALLIURN Megnitude 0.000
phoon H Tools Information gs Information	Pressure (Ph) 0.00 Sensor and Motor Speed Orientation Sensor(MU) Pressure Sensor Compass GPS Battery Voltage (V) 0.00 Accelerometer (m6) X X 0.00 Orientation(?) Roll Compass (raw value) X X 0.00 Pressure (Pa) 0.00	Controller Status	Temperature("C) 0.00 Speed Controllers(ESC) Image: Controllers(ESC) Sonar Image: Controllers(ESC) Image: Controllers(ESC) Image: Controllers(ESC) Sonar Image: Controllers(ESC) Image: Controllers(ESC) Image: Controllers(ESC) Sonar Image: Controllers(ESC) Image: Controllers(ESC) Image: Controllers(ESC) <td>e\D v Update 2 0.00 Height E</td> <td>Speed Controller Status and Testing - Chable Testing ALL TURN Megnitude 0.000 Yow 0.00 Cotimate (m) 0.00</td>	e\D v Update 2 0.00 Height E	Speed Controller Status and Testing - Chable Testing ALL TURN Megnitude 0.000 Yow 0.00 Cotimate (m) 0.00

5. Click Tools at the top and then click License

Firmware	Update Mc	otor Speed Controller	Status			Speed Controller Status and Testin
License	Se	nsor(IMU) 😽		Speed Controlk	ers(ESC) 🖌	Enable Testing
ings Information	Pressure Sense Compass GPS	* * *		Sonar	~	ALLTURN
	Battery Voltage (V)	16.6 91	us 🔲			
	Accelerometer X 0	(mG)	Y -41		Z -1001	Magnitude 1001.84
	Gyroscope("/s) X [0]	Y -11	ĺ	Z [-19	
	C ^{Orientation(*)}	Rail 22	i a		Fitch (0.1	Yere 539.1
	Compass traw	value)		v 76		Z 85
	Pressure Sense	077.05		Temperature PCL 2	2.87	Holalit Enimate Just 014

6. Locate where you saved the new license on your computer click it and click open.

	Unentation Sense	a(MU)	Speed Controllers	s(ESC) 🗸		Enable Testing
ettings	Pressure Sensor	1	Sonar	1		
PS Information	Compass	Open ← → - ↑ → This	PC + USB Drive (Fi) +	v Ö Search USS	Drive (F:)	
vice Information		Omanina • Nau folder			100 - TH 6	
	Voltage (V) 18	h Music	Nama	Data modified	Tens	
	Accelerometer(r	Pictures	No fly zone disable projects	8/12/2016 8:47 A 12/2/2015 7:27 A	M File folder	applude 1002.60
	Generalita	🏪 Local Disk (C:)	Resume	3/23/2016 3:01 P	V. File folder	
	X 0	RECOVERY (Dr) USB Drive (Fi)	Timecards	11/18/2015 6:28 1 6/2/2016 11:31 A	M File folder M Personal Informa	rti_
	Orientation(") -	USB Drive (F:) No Ry zone disal projects Resume Timecards		Type: Personal Informati Size: 16 bytes Date modified: 6/2/2016	n Exchange TI:31 AM	Yerr -385
		🧀 Network 🔍 🗸	¢			, LY
	Compass fraw vi	File nar	mer 0048004A-32355111-35353231	〜 Lic文件(*,p Open	a) v Cancel	

7. Once the new license is installed you will have new options appear on the settings tab for the No Fly Zone.

Geo-fence(20-2300m) Default 91m 250 91 Update Maximum distance from horse point in Smart Mo Height limit(20-1000m) Default 122m 1000 122 W Maximum height from horse point in Angle and Smar No Rly Zone Disable Clear Paramiters	Geo-fence(20-2500m) Defaults1im 2500 91 Update Maximum distance from home point in Smart Mo Height limit(20-1000m) Defaults122m 1000 122 W Maximum height from home point in Angle and Smar No Ry Zone: Disable No Ry Zone: Disable Clear Paramiters	Cee-fence(20-2300m) Default(91m 250 91 1 Update Maximum distance from home point in Smart M Height limit(20-1000m) Default(122m 1000 122 1 Nor Hy Zone Disable Nor Hy Zone Disable Clear Parameters	or Information		Current Value	New Value	ć.		
Anometion Rometion	height liest(20.1000m) Default:122m 1000 122 1 Height Constitution home point in Angle and Smalle No Ry Zone Disable Clear Parameters	Information ce Information Clear Parameters	1981 C	Geo-fence(20-2500m) Default/91m	2500	91		Update	Maximum distance from home point in Smart Mode
No Fly Zone Disable No fly Zone Eneble Clear Parameters	No Fly Zone Disable No Fly Zone Enable Clear Parameters	e Information e Information	-	Height limit(20-1000m) Default:122m	1000	122		Update	Maximum height from home point in Angle and Smart N
Clear Parameters	Clear Parameters	formation No fly Zone Enable Clear Parameters	mation					No Fly Zone Disable	
Clear Parameters	Clear Parameters	Clear Parameters	mation					No Hy Zone Enable	
								Clear Parameters	
								-	
				L					
				87)					
is opened.	is operand.	t is opened.	t is opened.						

8. Click the No Fly Zone Disable button to turn it off. When you do you will get a waning message confirming the action. Click yes. When you do you will get a Successful message. Click Yes.

Sensor Information		Current Value	New	Value		
Settings	Geo-fence(20-2500m) Default/91m	2500	91	1	Update	Maximum distance from home point in Smart Mode.
105 Information	Height limit(20-1000m) Default:122m	1000	122	-	Update	Maximmum height from home point in Angle and Smart Mod
					No Fly Zone Disable	
levice information					No Fly Zone Enable	
					Clear Parameters	
		Do you	want to Dis	Yes	Zone?	

formation		Current Value	New	Value		
	Geo-fence(20-2500m) Default/91m	2500	91	1	Update	Maximum distance from home point in Smart Mode.
	Height Smit(20-1000m) Default 122m	1000	122	1	Update	Maximum height from home point in Angle and Smart Nos
muston					No Fly Zone Disable	
formation					No Ry Zone Enable	
					Clear Parameters	
		N	icte			
		N	icte			
		ľ	iote Su	ccessfully!		
		ħ	iote Su	ccessfully!		
		ħ	iote Su	ccessfully!	Yus	
		N	ione Su	ccessfully!	Yus	
		N	iote Su	ccessfully!	Yus	
		N	iote Su	ccessfully!	Yes	

**** If you do future firmware updates it will overwrite this and you will have to redo this process ****